

How to use Charger IP Tool (Windows)

About Charger IP Tool:


- Audio-Technica Charger IP tool enables you to use a computer to view all ATW-CHG3N chargers on the network and configure their network settings.

System Requirement:

- Microsoft Windows 7 or later.

Charger IP Tool Screen:

Charger IP Tool lists the chargers detected on the network and displays their Name, ID, and IP Address, and whether the IP Address is set to Static or Auto.

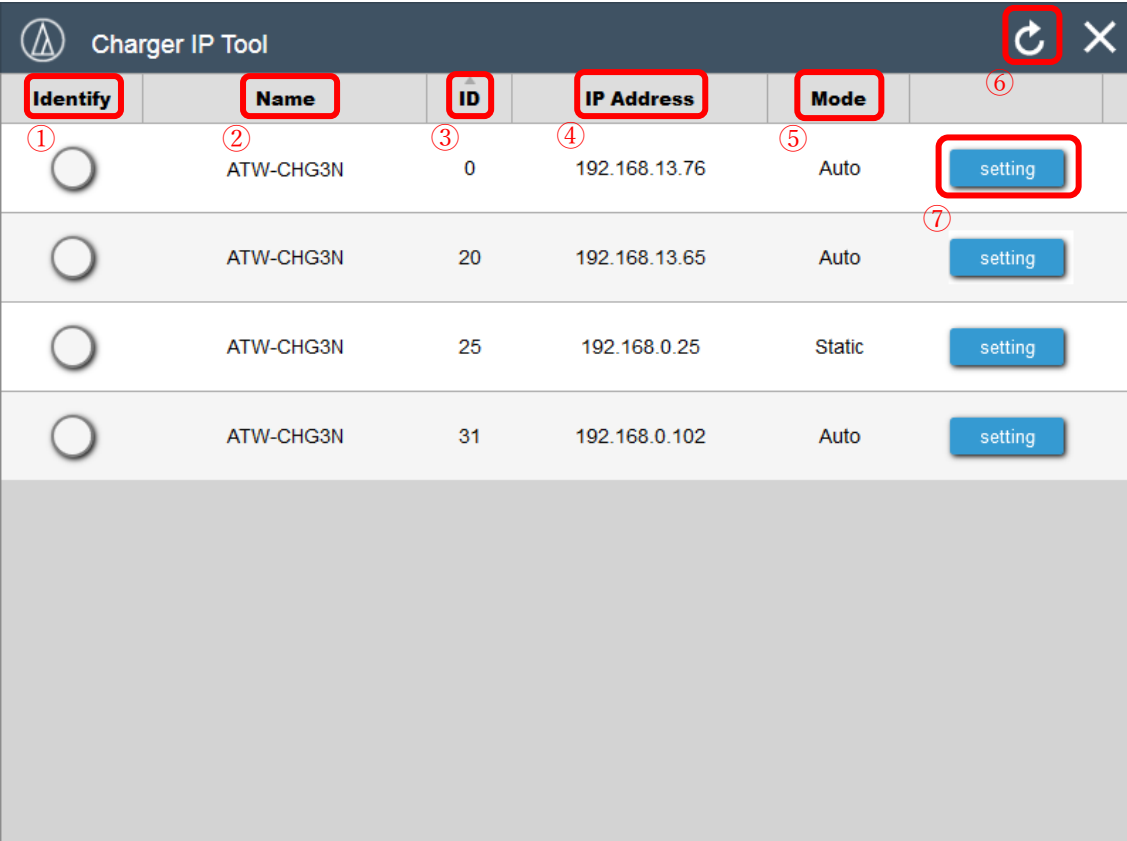

Identify	Name	ID	IP Address	Mode	
① <input type="radio"/>	② ATW-CHG3N	③ 0	④ 192.168.13.76	⑤ Auto	⑥ <input type="button" value="setting"/>
<input type="radio"/>	ATW-CHG3N	20	192.168.13.65	Auto	⑦ <input type="button" value="setting"/>
<input type="radio"/>	ATW-CHG3N	25	192.168.0.25	Static	<input type="button" value="setting"/>
<input type="radio"/>	ATW-CHG3N	31	192.168.0.102	Auto	<input type="button" value="setting"/>

①	Identify	Clicking the Identify button for a charger causes the LEDs on that charger to blink.
②	Name	Displays the name of each unit. Clicking on [Name] sorts the list in ascending or descending alphanumeric order.
③	ID	Displays the ID of each unit. Clicking on [ID] sorts the list in ascending or descending number order.
④	IP Address	Displays the IP address of each unit. Clicking on [IP Address] sorts the list in ascending or descending alphanumeric order.
⑤	Mode	Displays the IP configuration mode, Auto or Static, of linked devices.
⑥	Refresh	Clicking on the Refresh icon refreshes the list.
⑦	Setting	Clicking [Setting] opens the setting window for the selected charger.

Setting Window

①

②

③

④

⑤

①	Device ID	Set the Device ID as a number from 0 to 255.
②	Auto/Static	Select the IP configuration mode, Auto or Static, of the selected charger.
③	IP Address, Subnet Mask, Gateway Address	When IP configuration mode Static is selected, set the IP Address, Subnet Mask and Gateway Address.
④	Apply	Apply the settings to the selected charger.
⑤	Cancel	Undo and close the window.